



INLINE Exchange

CONNECTION

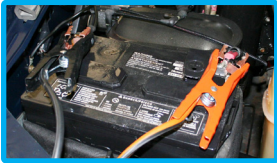

Connect battery cables to vehicle's battery.

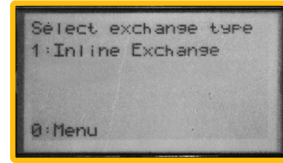


Press **1** for **Inline Exchange**

OPERATION




Connect appropriate adapters to vehicle's cooler line fittings.

Connect red and black service hoses to quick disconnect adapters on the end of the cooler line adapters.

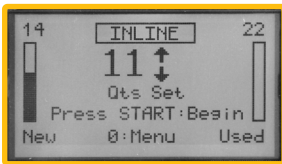

Use the arrow keys to select the desired amount to be exchanged. Press to proceed. Turn vehicle's **engine on**.


Press to begin the exchange.

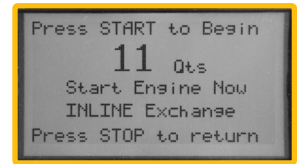


Once exchange is finished the screen will beep and display "Complete".





ADDITIONAL FEATURES

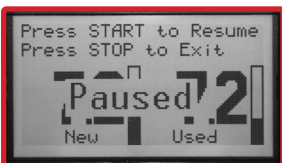

If needed, while running, pressing once will pause the machine. Press to resume from pause, or press a second time to cancel the exchange

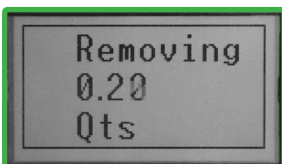

Check the fluid level. Press or to add or remove fluid in 2/10 of a quart increments. Use **option 3** in the main menu to add a full quart and **option 4** to remove a full quart.

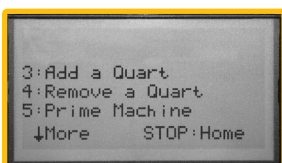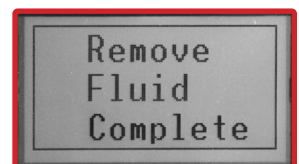

Press to return to the main menu.