

### CHANGE LANGUAGE



Press small gear icon on home screen.



Press the large gear icon.



Press the language icon.



Select desired language, or arrow to next page for additional selections.

### CHANGE MEASUREMENT UNITS



Press small gear icon on home screen.



Press the large gear icon.



Press the measurement icon.




Select desired measurement units.


### ENTER SHOP INFORMATION




Press small gear icon on home screen.

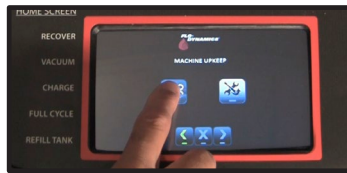

Press the large gear icon.

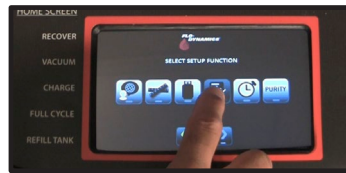

Press the information icon.

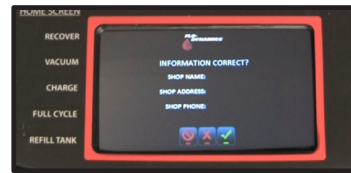

Follow instructions on screen.

### SET DATE & TIME




Press small gear icon on home screen.



Press the large gear icon.




Press the time icon.

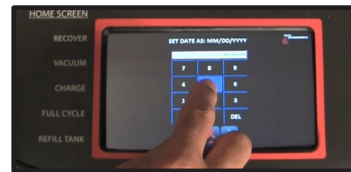


Enter correct information.


### FILTER CHANGE

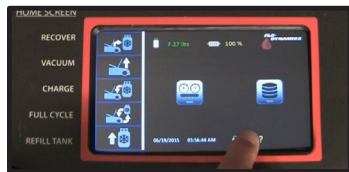

Press small gear icon on home screen.

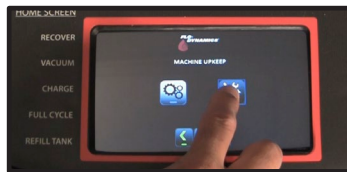


Press the wrench icon.

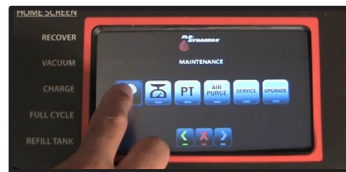

Press the filter icon.



Press the green arrow to continue.

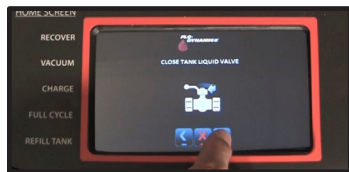


Close the liquid tank valve and press the green arrow to continue.



Turn filter on its side and follow instructions on screen.

### SETUP

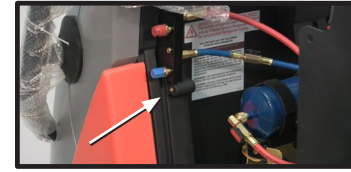

Remove packing material. Remove cover by unscrewing the two knobs.



Remove scale protection foam and replace cover.

### STARTUP




Plug in to an appropriate outlet. (If using extension cord, it must be properly rated.) Press power button.



Follow instructions on screen and press the green arrow.

### RECOVERY

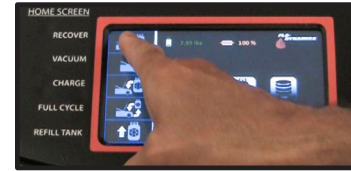

Press the "RECOVER" icon.



Press the green arrow.




Press green arrow for required identification.



Connect blue coupler to vehicle, open, and press the green arrow.



When passed, press the green arrow.

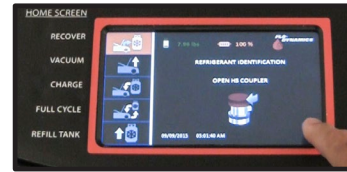

Connect red coupler to vehicle, open, and press the green arrow.



Enter the amount of oil recovered and press the green arrow.




Press the green arrow when complete.

### VACUUM



Press the "VACUUM" icon and press the green arrow to continue.

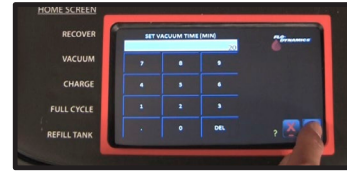

Enter vacuum time or select a preset time, and press the green arrow.



Follow instructions on screen and press the green arrow.



Press the green arrow when complete.

### TANK REFILL



Press the "REFILL TANK" icon.



Press the green arrow.



Press green arrow for required identification.



Connect red hose to virgin tank with adapter. Open tank and hose valve.



Press the green arrow.



When purity is confirmed, press the green arrow.



Turn the virgin tank so the valve is on the bottom.



When tank fill is complete, press the green arrow.



### CHARGE A NON-ELECTRIC VEHICLE



Press the "CHARGE" icon.



Press the green arrow.



Answer "NO" to question on screen.




Connect the hoses to the vehicle, open, and press the green arrow.




Select which port you want to charge. Either both, high side, or low side.



Press the green arrow.

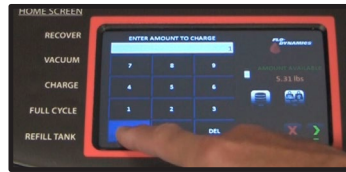

Enter the amount to charge and press the green arrow.

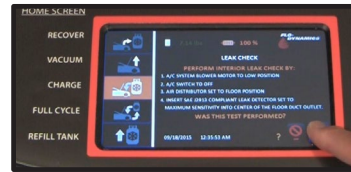

After vacuum and pressure leak checks, press the green arrow.



If no leak is found, press "NO".




Answer question to continue.



Press green checkmark to go to car health, or "NO" to complete process.



Close high side coupler and press the green arrow.

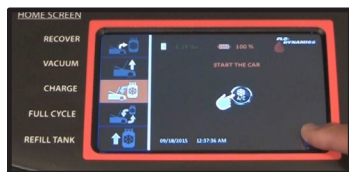

Start the car & press the green arrow.



Close low side coupler and disconnect both couplers. Press the green arrow.



Inject the necessary amount of oil and press the green arrow.



Press the green arrow to complete.

### CHARGE A HIGH VOLTAGE VEHICLE (HYBRID OR ELECTRIC)




Press the "CHARGE" icon.



Press the green arrow.



Answer "YES" to question on screen.

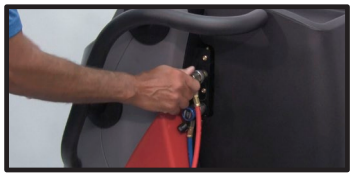

Connect the hoses to the machine's service port.



Press the green arrow.



When instructed, close couplers, disconnect from machine & press green arrow.




When complete, connect hoses to vehicle, open valves, & press green arrow.




Select which port you want to charge. Either both, high side, or low side.




Press the green arrow.

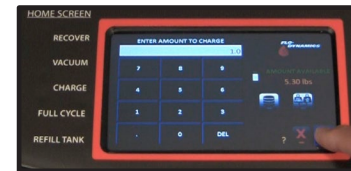


Enter the amount to charge and press the green arrow.

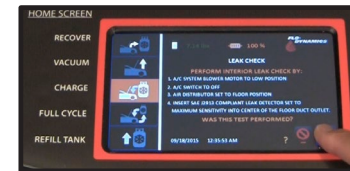

After vacuum and pressure leak checks, press the green arrow.

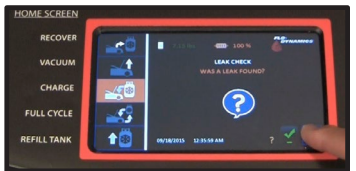

If no leak is found, press "NO".

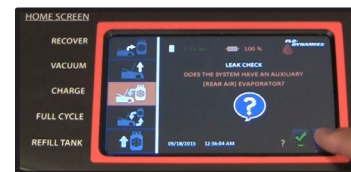


Answer question to continue.



Press green checkmark to go to car health, or "NO" to complete process.



Close high side coupler and press the green arrow.

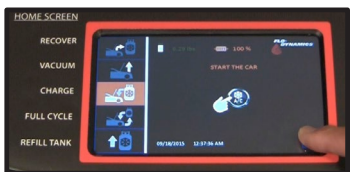

Start the car & press the green arrow.


### CAR HEALTH (BEFORE & AFTER SERVICE)



Press the "GAUGE" icon.



Connect hoses to vehicle, open couplers, start vehicle & connect temperature probe to back of unit.

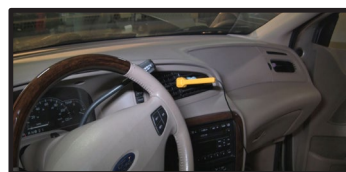

Insert probe into middle duct. Turn on vehicle's A/C and fan to low.



Press the green arrow.



Press the print icon to print data and press the green arrow to continue.



Close the high side coupler and press the green arrow.



Close low side coupler and disconnect both couplers. Press the green arrow.



Inject the necessary amount of oil and press the green arrow.



Press the green arrow to complete.